


PARTS

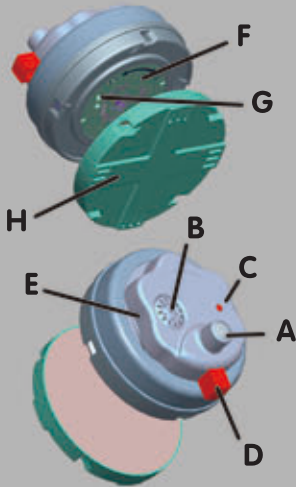

- A. Magnetic Clutch
- B. Buzzer
- C. LED(Red)
- D. Lock Plunger
- E. Rotatable Top Plate
- F. Battery Box
- G. Reset Button
- H. Bottom Plate

GET STARTED



When keep pressing the reset button, the buzzer will alarm continuously and the red LED will flash continuously; When release the reset button, the buzzer will stop alarming and the red LED will flash every 6 seconds. When the AS1008 is alarming, press the reset button, and the alarming will stop and when release the reset button the AS1008 will be back to the normal working status.

CHANGE BATTERY



Open the battery box with a screwdriver, then place a battery into it.

SET UP LOCK STATUS



Place the lock on a magnetic detacher which the magnetic force is more than 6,000GS, the AS1008 will be unlock automatically. The rotatable top plate is

able to rotate clockwise or the reverse.



Press the lock plunger following the direction of the arrow, the top plate can rotate clockwise only.

APPLICATION



Release the cables, place the four cables around the four sides of the item being protected.



Place the item on the bottom plate, press the lock plunger, then rotate the top plate clockwise, until it is locked tightly.

Battery Information

- A. This product can be used repeatedly, please replace a new battery, when the battery is used out.
- B. The LED flashes every six seconds, when the battery is low.
- C. The LED flashes every one second, and also the buzzer beeps once every minute, when the battery is low.