


PARTS

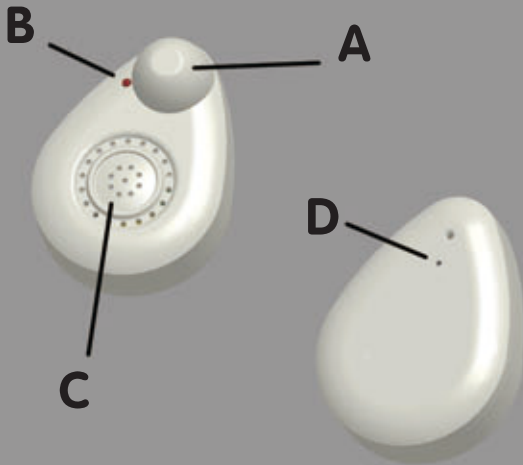

- A.** Lock
- B.** LED
- C.** Buzzer
- D.** Reset Button

SELFA ALARM TEST & DISALARM METHOD



Keep pressing the reset button, the buzzer will alarm continuously, and the LED will flash continuously, until the pressing on the Reset Key is released; Meanwhile, applying a click on the reset button, the selfalarm of the tag will be turned off.

BATTERY INFORMATION

1. When the self alarm protection of AS1012 is armed, if the LED, flashes once every 6 seconds, the battery power is OK; If the LED flashes once every second, and the buzzer beeps once every minute, the battery power is low;
2. The self alarm protection is activated before leaving factory;
3. The battery is irreplaceable, please dispose when the battery is use out.

LED INFORMATION

1. When the self alarm protection of AS1012 is armed, and the selfalarm is triggered, the LED will flash continuously;
2. LED for the battery information, please check the "BATTERY INFORMATION".

BUZZER INFORMATION

1. When the self alarm protection of AS1012 is armed, and the selfalarm is triggered, the buzzer will alarm continuously in a volumn up to 100dB;
2. Buzzer for the battery information, please refer to the "BATTERY INFORMATION".