
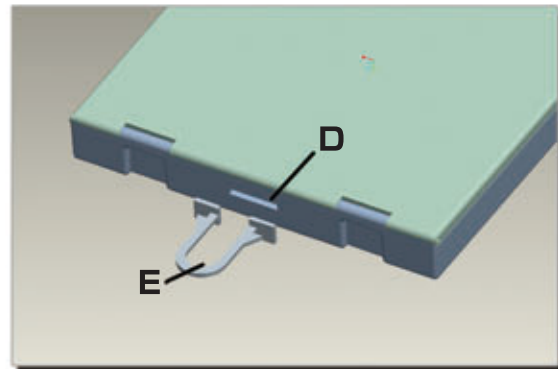


IDENTIFYING THE PARTS

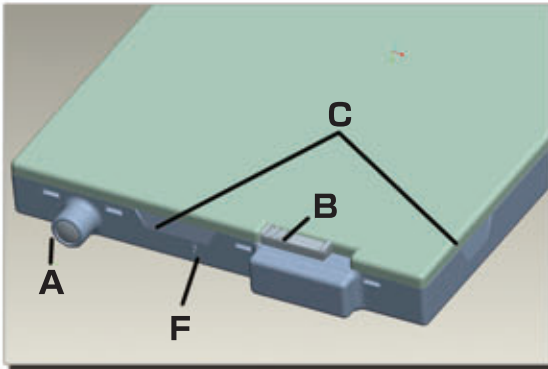

- A.** Security lock
- B.** Security tap
- C.** U-shape cut
- D.** Slot for optional hanger
- E.** Optional display-hanger
- F.** Locking panel


SETTING THE LOCK OPEN

Open the safer case by applying the part A onto a magnetic detacher, slide the part B to the right in the same time.



UNFOLDING THE SAFER CASE

Hold the safer case with its locking panel facing you, place one finger at either left or right side of the safer case in the U-shape cut and the thumb in the U-shape cut in the middle of the locking panel. Then open the safer case with a gentle push by the thumb.

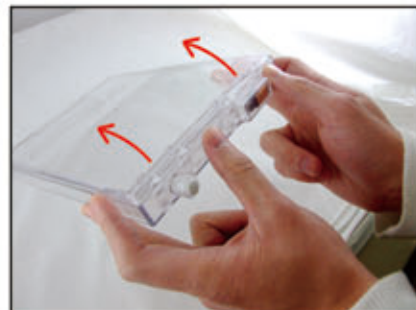

INSTALLING AN OPTIONAL HANGER

For using with the hanging-display merchandise, install the optional hanger by pushing the part E into the slot on the safer case until it is clicked.



SETTING A LOCK FOR THE SAFER CASE

Fully close the safer case, slide the part B to the left until it is clicked.

