


IDENTIFYING THE PARTS

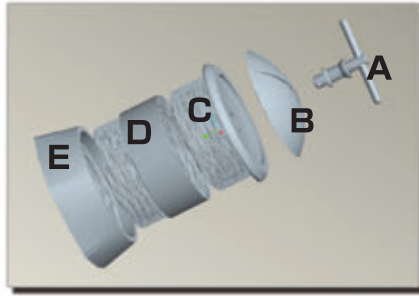

- A. Lid lock B. Security lid
- C. Magnetic body D. Extension neck
- E. Magnetic body seat

RECESSING THE DEVICE

1. Reassembling the detacher

Disassemble the unit into parts, reassemble the part C with part D, engage the part D in a proper position on the part C to make the length of part D in accordance with the depth of the cash counter. (holes drilled in advance)




2. Building the unit into the cash counter

Locate the unit into the pre-set hole on the cash counter.



3. Fixing the device with the cash counter


Apply the part E onto the device from the back of the cash counter, and fasten it firmly by a clockwise spin. If the cash counter is with a thin depth panel, remove the part D, then repeat the procedures above.

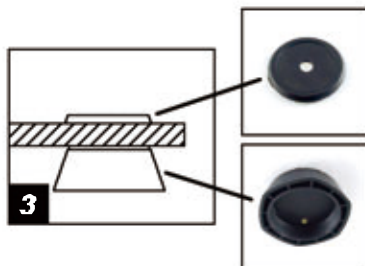

MOUNTING THE DEVICE

1. Reassembling the detacher

Disassemble the unit into parts, then assemble the part C with the part E.

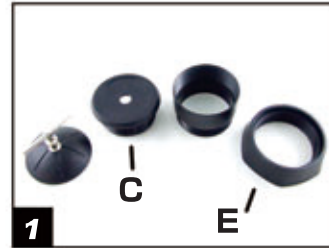

2. Mounting the detacher onto the cash counter

Mount the unit with screws onto the cash counter by the screws on the bottom. (holes drilled on site)



USING A DETACHER LID

1. Applying a detacher lid to disfunction a detacher

Assemble the part A and part B, then position the unit onto the detacher's magnetic panel.



2. Locking the detacher lid with the detacher

Make a push on the part A to release it from the detacher lid

