


ABOUT THE ALARM SECURED MOUSEGUARD-AS1009

It gives retailers three levels of merchandise protection. An early detection alarm alerts the store personal, when the product is being tampered with inside the store. The alarm will also sound, when the EAS system is triggered by the merchandise's leaving from the store. And the merchandise is attempts to leave the store, the units will also self alarm.

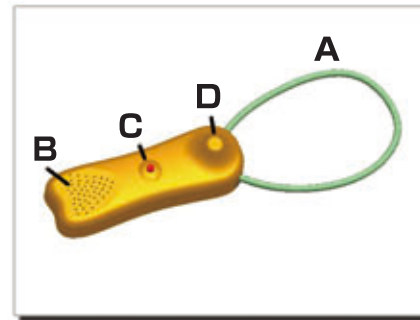

- A. Lanyard clip
- B. Speaker
- C. Red LED indicator
- D. Security lock

APPLY THIS UNIT

Loop the lanyard through a non-removable portion of the merchandise. Push the clip into the tag housing



REMOVE THIS UNIT

To remove it from merchandise, place the magnetic detacher onto the security lock, slide the lanyard out of the tag housing



KEY FEATURES

Tampered with Self Alarm

The unit will alarm, when the product is being tampered with. The alarm will not be deactivated, until the battery runs out.

Triggered Self Alarm by going through EAS system

If the merchandise attempts to leave the store through an EAS system, the units will also self alarm. The alarm could only be deactivated, when the unit is being placed STILL for 30 seconds.

Red LED indicator

The Red LED indicator flashes every 5 second, when battery in normal status, and flashes every 1 second for low battery status.