

**STEP.1 EQUIPMENTS REQUIRED**

ALARM SECURED WRAPS; SUPER DETACHER; A PEN WITH NEEDLE HEAD



**STEP.2 PRECHECK THIS DEVICE**

Default setting: the mechanical lock was set open and could be turned clockwise or anticlockwise; power was on; the LED indicator light flashes once every six seconds; the buzzer won't alarm, until the product cable was cut.



**STEP.3 LOCK**

If need to lock the product, press the red lock-button as the arrowhead way till you heard a warning tone "ka". After locking, the product could only be turned clockwise and shrink the cable, the warning tone "ka-ka" sounds when turning.



**STEP.4 UNLOCK**

If need to open the lock, put the lock point of the product onto the center part of a detacher, the red lock will be unlocked automatically. After unlocking, the product could be turned clockwise to shrink the cable or anticlockwise to spread the cable.



**STEP.5 ACTIVATE / DEACTIVATE**

The self-alarming function only work after activating. Use a needle or pen to push the "RESET" hole till a warning sound alarm to activate the product, after activating, the red LED light will flash every 6 seconds. If need to close the self-alarming function or stop the alarming, you should deactivate the product. Use a needle or pen to push the "RESET" HOLE till the red LED light stop flashing.



**BATTERY INFORMATION**

A.the product is not reusable, please change a new one when the cable was cut off or battery exhausted.

B.if the battery is enough, the LED light flash every 6 seconds; if the battery is low, the LED light flash frequently.

C.the product is able for 15 minutes continuous alarming, and also workable after the alarming was ceased.